

# Model 200 Mounted Sentry Single

## Model # SS-200-MSS

### Product Specifications

#### BASE UNIT DIMENSIONS

10.5" Length  
10" Width, *Including Mounting Brackets*  
10.5" Height

#### ARM DIMENSIONS

3" or 4" Diameter x 28" Long (5" or 6.5" Dia. Round Hood)

#### CABINET MATERIAL

16 ga. Carbon Steel

#### WEIGHT

Approx. 10 lbs.

#### AIR VOLUME

Up to 100 CFM. *Varies with filter media.*

#### ELECTRICAL

115/1/60, Approx. 0.3 Amps  
220/1/50, Approx. 0.2 Amps  
8' grounded power cord with NEMA 5-15P Plug

#### SOUND LEVEL

Approx. 58 dba @ 2' from inlet


#### FILTRATION

Depending on the Application:

- HEPA [up to 99.97% efficient on particles 0.3 microns and larger]
- ASHRAE [up to 95% efficient on particles 0.5 microns and larger]
- ACTIVATED CARBON
- SPECIALTY-BLENDED FILTER MEDIA [i.e. Acid Gas, Mercury, Aldehyde, Ammonia]

#### WARRANTY

Limited two-year warranty from date of shipment on defects due to materials or workmanship.  
PATENT #5,843,197

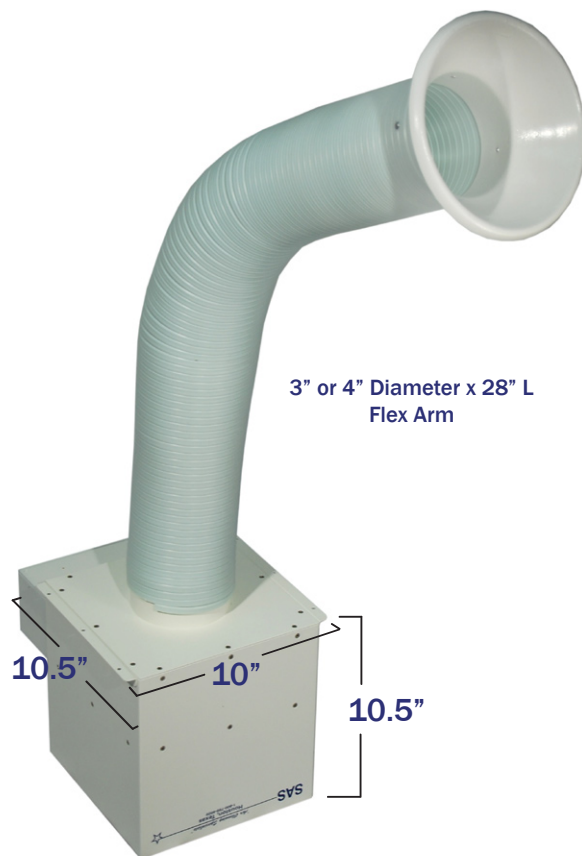

3" or 4" Diameter x 28" L Flex Arm

10.5" 10" 10.5"

Dimensions are Approximate

### Product Features

- Self-Supportive 28" L Flex Arm *Included*
- Quiet Operation
- Long Filter Life
- Mounting Brackets *Included*
- Simple, Quick "No Tool" Filter Change
- Optional Variable Speed Controller
- Highly Portable and Lightweight
- Reliable, Low Maintenance Operation
- Optional Hour Counter

The **Mounted Sentry Single** fume extractor is an excellent choice for small or limited workspace environments where clean air is desired. The unit features a self-supportive flex arm that provides source capture of airborne contaminants, while mounting options can free up much needed workspace. Mounting configurations include bench-mounting, under-the table mounting, and shelf or wall mounting.

Typical applications for this unit include soldering, chemical fumes, solvent and epoxy fumes, laser fumes, light grinding, and many other procedures that involve the emission of particulate and fume.

High-quality filter media for this unit is customized depending on the application being performed, but typically includes HEPA filters [up to 99.97% efficient on particles 0.3 microns and larger], ASHRAE filters [up to 95% efficient on particles 0.5 microns and larger], Activated Carbon, and specialty-blended filtration media [i.e. Acid Gas, Mercury, Aldehyde, Ammonia].

The **Mounted Single Sentry** provides an effective, quiet and economical solution to many fume extraction needs.

A larger model [SS-300-MSS] and a dual-arm unit [SS-200-MSD] are also available.



1.800.799.4609  
www.sentryair.com  
sales@sentryair.com

