



MOUNTED SENTRY SINGLE


SS-200-MSS

Air Volume: 80 CFM
Weight: 10lbs



The Mounted Sentry Single is an excellent choice for small or limited workspace environments where clean air is desired. Its self supporting flex arm provides source capture of airborne contaminants, while under the table mounting frees up much needed workspace.

Not only does this make the total work area more usable, but it is cleaner, neater and more organized. Quiet operation combines with a variety of HEPA and carbon filters to create an effective and unique solution for many operations.

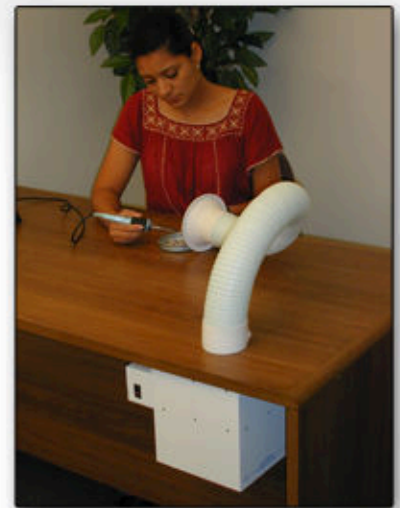

Features

- Semi-Supportive Flex Arm
- Lightweight & Compact Size
- HEPA or Other Filters
- Durable Construction
- Quiet Operation
- Lightweight Design

Options

- Hour Counter
- Variety of Mounting Options
- Various Filter Options
- Outlet Plenum for Exhausting
- Variable Speed Controller

Technical Specifications

Cabinet Dimensions	Arm Dimensions	Cabinet Material	Electrical	Sound Level
9"D 8"W 11"H	3" Round 28" Long 5" Round Hood	16 ga Carbon Steel w/ Polyester Epoxy Coating on Surface	115/1/60 Approx. .3 amps	56 dba @ 2' From Inlet

Limited one year warranty from date of shipment on defects due to materials or workmanship.
All specifications are nominal and subject to change without notice.
Not intended for explosive or highly combustible applications.

USA: 800.799.4609
INTL: 713.690.2153
FAX: 713.690.7872

800.799.4609

WWW.SENTRYAIR.COM

Sentry Air Systems, Inc.
6999 West Little York RD., #P1
Houston, TX 77040