

Model 300 Floor Sentry Quad

Model # SS-300-FSQ

Product Specifications

BASE UNIT DIMENSIONS

15.5" Length, *Including Control Box*
 13" Width
 16.5" Height

ARM DIMENSIONS

(4) 3" Dia., 48" Long Fire-Retardant Flex Hose (5.5" Dia. Round Hoods)

CABINET MATERIAL

16 ga. carbon steel w/ polyester epoxy coating on all surfaces

WEIGHT

Approx. 50 - 60 lbs.

AIR VOLUME

Variable Speed Control Standard on 115V
 80 CFM High Per Arm, Down to 50 CFM Low
 On/Off Toggle Switch Standard on 220V

ELECTRICAL

115/1/60, 2 amps
 220/1/50, 0.75 amps
 8' grounded power cord with NEMA 5-15P Plug

SOUND LEVEL

61 to 66 dba (Blower Speed: Low to High)


FILTRATION

Depending on the Application:

- HEPA [up to 99.97% efficient on particles 0.3 microns and larger]
- ASHRAE [up to 95% efficient on particles 0.5 microns and larger]
- ACTIVATED CARBON
- SPECIALTY-BLENDED FILTER MEDIA [i.e. Acid Gas, Mercury, Aldehyde, Ammonia]

WARRANTY

Limited two-year warranty from date of shipment on defects due to materials or workmanship.
 PATENT #5,843,197

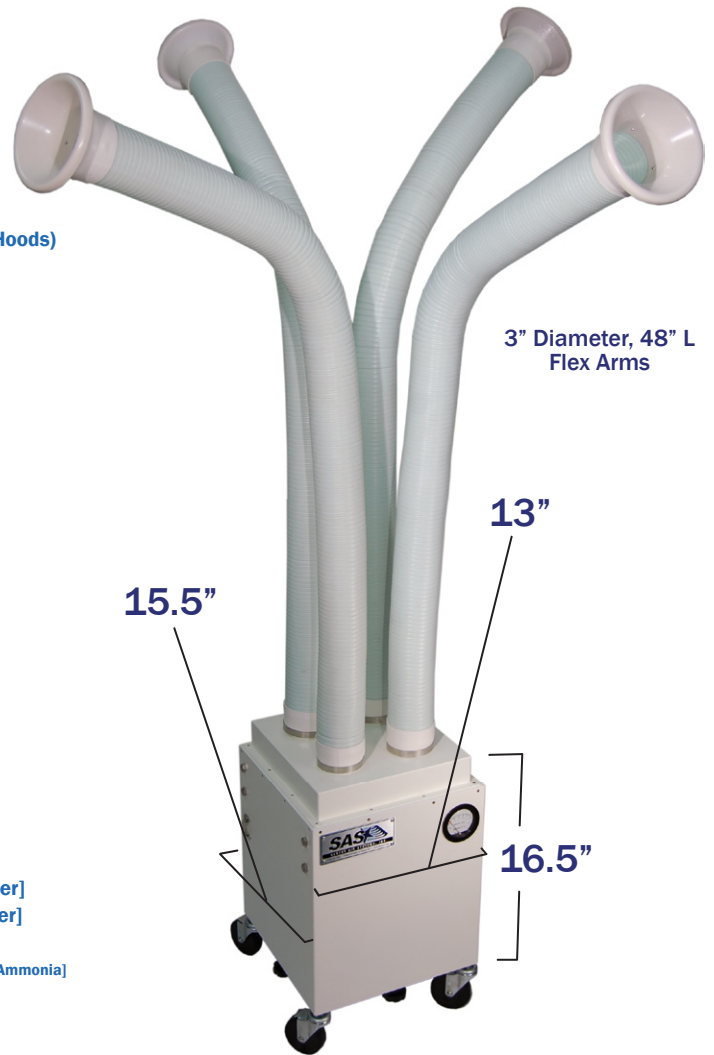

3" Diameter, 48" L Flex Arms

13"

15.5"

16.5"

Dimensions are Approximate Shown with Optional Features

Product Features

- Variable Speed Controller *Included*
- Portable Handle *Included*
- Quiet Operation
- Reliable, Low Maintenance Operation
- Low Power Consumption
- Simple, Quick "No Tool" Filter Change
- Long Filter Life
- Optional Magnehelic Gage
- Optional Hour Counter

The **Floor Sentry Quad Fume Extractor** is a cost-effective choice for limited workspace environments where air filtration is desired for multiple operators. A powerful fan and four semi self-supportive flex arms provide strong suction for the source capture of airborne contaminants, while floor placement frees up much needed benchtop workspace.

Typical applications for this unit may include soldering, powder and capsule filling, solvent and epoxy use, and a variety of applications involving chemical fumes and dusts. This unit is also a popular choice for technical schools (i.e. electronics laboratories) that require fume extraction for multiple students.

Several filtration options are available for this unit and include: HEPA filtration [up to 99.97% efficient on particles 0.3 microns and larger], ASHRAE filtration [up to 95% efficient on particles 0.5 microns and larger], Activated Carbon, and specialty-blended filter media [i.e. Acid Gas, Mercury, Aldehyde, Ammonia]. The Floor Sentry Quad allows multiple filter media to be housed inside the filter chamber for applications that emit both particulates and fumes.

The **Floor Sentry Quad Fume Extractor** can provide an effective and economical solution for many commercial, medical, laboratory and industrial applications. This unit is available with a single arm [SS-300-PFS], dual arms [SS-300-FSD], and in larger models [SS-400-FSQ & SS-450-FSQ].



1.800.799.4609
www.sentryair.com
sales@sentryair.com

