

Model 200 Mounted Single Sentry

Model # SS-200-MSS



The **Mounted Sentry Single** fume extractor provides an excellent fume extraction choice for small or limited workspace environments. The unit features a self-supportive flex arm that provides source capture of airborne contaminants, while mounting options can free up much needed workspace. Mounting configurations include bench-mounting, under-the table mounting, and shelf or wall mounting.

Typical applications for this unit include *soldering, chemical fumes, solvent and epoxy fumes, laser fumes, light grinding, and many other procedures that involve the emission of particulate and fumes.*

The high-quality filter media for this unit used depends on the application being performed, but typically includes **HEPA filters** (up to 99.97% efficiency on particles 0.3 microns and larger), **ASHRAE filters** (up to 95% efficient on particles 0.5 microns and larger), **Activated Carbon**, and **specialty-blended filtration media** [i.e. acid gas, mercury, aldehyde, and ammonia].

The **Mounted Single Sentry** offers an effective, quiet and economical solution to many fume extraction needs with limited workspace.

A larger model [SS-300-MSS] and a dual-arm unit [SS-200-MSD] are also available.



Model 200 Mounted Single Sentry



Model 200 Mounted Single Sentry easily mounts on the wall to free up benchtop space.

Product Features


- **Included:** self-supportive 28" L flex arm and mounting brackets
- **Optional:** Variable Speed Controller (115V only) and hour counter
- Reliable, low maintenance operation
- Quiet operation
- Simple, quick "no tool" filter change
- Long filter life
- Small footprint



21221 FM 529 Rd, Cypress, TX 77433
1.800.799.4609 • sales@sentryair.com
www.sentryair.com

Fume & Particulate Removal

Product Specifications

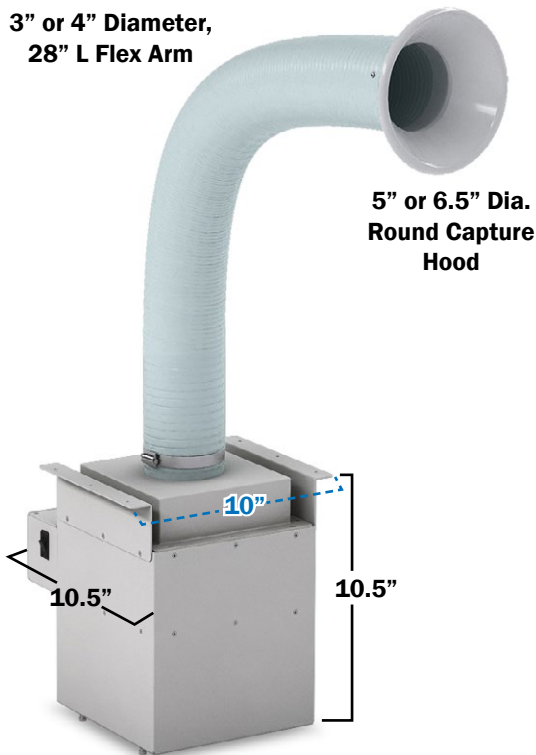

Dimensions are approximate



21221 FM 529 Rd
Cypress, TX 77433
1.800.799.4609
sales@sentryair.com

www.sentryair.com

Base Unit Dimensions	Length: 10.5" (Includes Control Box) Width: 10" (Includes Mounting Brackets) Height: 10.5"
Arm Dimensions	3" or 4" Diameter, 28" L 5" or 6.5" Capture Hood
Cabinet Material	16 Ga. carbon steel
Weight (approximately)	10 lbs
Air Volume (approximately)	Up to 100 CFM
Electrical	115/1/60, 0.3 amps 220/1/50, 0.2 amps 8' grounded power cord with NEMA 5-15P plug
Sound Level (High at 3' from inlet)	Approx. 56 dba
Main Filter Options	Depending on the Application: HEPA [up to 99.97% efficiency on particles 0.3 microns and larger] ASHRAE [up to 95% efficiency on particles 0.5 microns and larger] ULPA [up to 99.9995% efficiency on particles 0.12 microns and larger] Activated Carbon Specialty-Blended Filter Media [i.e. Acid Gas, Mercury, Aldehyde, and Ammonia]
Warranty	Limited two-year warranty from date of shipment on defects due to materials or workmanship.
US Patent	#5,843,197