

## Model 200 Smoke Sentry

Model # SS-200-SMK



The **Smoke Sentry Fume Extractor** offers an effective, quiet and economical solution for businesses and homeowners looking to remove odorous cigarette smoke and tobacco odor. This compact, portable smoke extractor pulls up to 100 CFM of contaminated air through **HEPA** and **Carbon filters** where the air is cleansed of hazardous particulate commonly found in smoke haze.

Unique to many smoke eliminators on the market, the **Smoke Sentry** is constructed of high quality, commercial-grade materials designed for longevity and durability. The Smoke Sentry can handle continuous running without overheating, and maintenance is as simple as an occasional wipe down and filter change.

Position the **Smoke Sentry** near an ashtray for source capture extraction or set it on a table or bar for ambient smoke and vapor removal. By scrubbing the air of harmful smoke and liquid cigarette vapor, a room is more appealing to customers, employees and guests.

As a companion to the **Smoke Sentry**, our line of portable and free-hanging room air cleaners offer added air filtration for indoor spaces.



Model 200 Smoke Sentry

### Applications

- Game Halls
- Restaurants
- Bars
- Clubs
- Casinos
- Cigar Lounges
- Residences
- Casinos

### Product Features

- **Includes:** variable speed controller (115V only)
- **Optional:** hour counter
- Highly portable and lightweight
- Quiet, reliable, low maintenance operation
- Sturdy construction
- Simple, quick “no tool” filter change
- Long filter life

### Benefits


- Captures harmful cigarette and tobacco smoke.
- Removes airborne particulates.
- Helps create a more appealing environment for customers and employees.



21221 FM 529 Rd, Cypress, TX 77433  
1.800.799.4609 • sales@sentryair.com  
[www.sentryair.com](http://www.sentryair.com)

# Smoke & Odor Removal

## Product Specifications

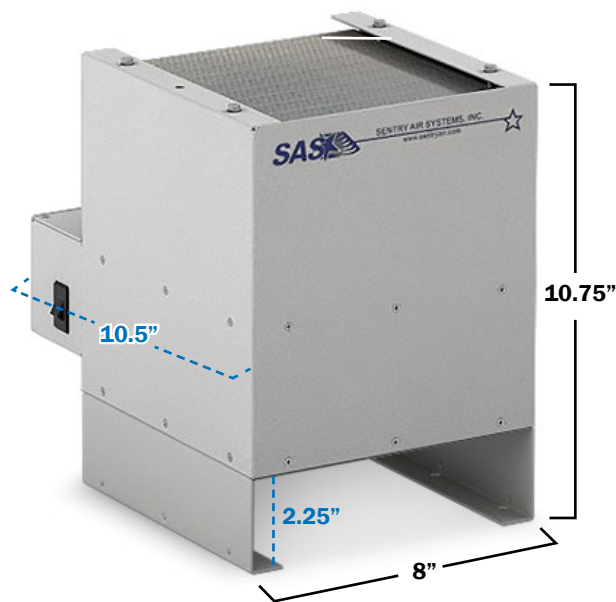

Dimensions are approximate

Base Unit Dimensions	<b>Length:</b> 10.5" (Includes Control Box) <b>Width:</b> 8" <b>Height:</b> 10.75"
Slot Dimensions	2.25"
Cabinet Material	16 Ga. carbon steel
Weight (approximately)	12 lbs
Air Volume (approximately)	up to 100 CFM <i>Varies with filter media</i>
Electrical	115/1/60, 0.3 amps 220/1/50, 0.2 amps 8' grounded power cord with NEMA 5-15P plug
Sound Level (High at 3' from inlet)	Approx. 58 dba
Main Filter Options	<i>Depending on the Application:</i> <b>HEPA</b> [up to 99.97% efficiency on particles 0.3 microns and larger] <b>Activated Carbon</b>
Warranty	Limited two-year warranty from date of shipment on defects due to materials or workmanship.
Patent #	5,843,197



21221 FM 529 Rd  
Cypress, TX 77433  
1.800.799.4609  
sales@sentryair.com

[www.sentryair.com](http://www.sentryair.com)