

Model 400 Mounted Sentry Fume Extractor with Stand



Model # SS-400-MS-FES

The **Model 400 Stand Mounted Sentry Fume Extractor** with flex arm provides industrial air cleaning designed for elevated, source-capture fume extraction. This system comes equipped with a powerful fan and a variety of inlet collar sizes to match your unique application and features a variable speed controller with an optional remote control.

Ideal for environments with oversized machinery, open concept workspaces, or even smaller facilities who want to save valuable floor space, the **Model 400 Stand Mounted Sentry Fume Extractor** utilizes a high-strength industrial stand that secures and elevates the fume extractor up and off of the floor. The included flex arm provides a 62.5" swivel radius allowing greater flexibility within the workspace. To ensure superior hold, the stand underwent stringent structural testing with a third party engineering firm. Testing included a variety of weight loads and bend radii and the results were optimal.

Typical applications include: *Welding Fume Extraction, Laser Fume Control, Chemical Fume Extraction, Pharmaceutical Powders, Particulate Control, Printing Fumes, Soldering, Solvent and Epoxy Fume Control, Fume/Vapor Source Capture, Light Grinding, and various other industrial processes.*

As an option, this system can have a 7' Heavy Duty Extractor Arm equipped for greater reach and higher volume fume extraction applications.



Model 400 Mounted Sentry Fume Extractor with Stand

Product Features

- **Includes:** variable speed controller (115V only), ON/OFF toggle switch (220V only), and 91" tall Fume Extractor Stand
- **Optional:** Magnehelic Gauge, hour counter, and 7' Heavy Duty Extractor Arm
- Self-supportive, flexible arm with 62.5" swivel radius
- Quiet, reliable, and low maintenance operation
- Low power consumption
- Long filter life
- Simple, quick "no tool" filter change




Model 400 Mounted Sentry frees up valuable benchtop space with fume extractor stand.



21221 FM 529 Rd, Cypress, TX 77433
1.800.799.4609 • sales@sentryair.com
www.sentryair.com

Fume & Particulate Removal

Product Specifications

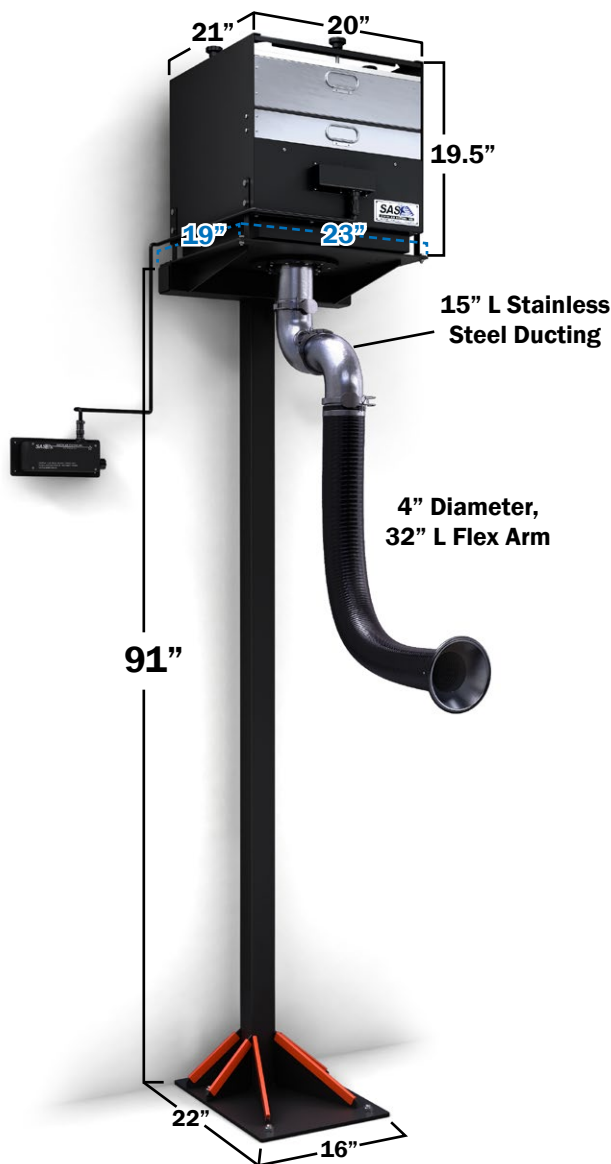

Dimensions are approximate.
Floor mounting hardware not included.



21221 FM 529 Rd
Cypress, TX 77433
1.800.799.4609
sales@sentryair.com

www.sentryair.com

Stand Dimensions	Total Height: 91" Platform Base: 16" W x 22" D Platform Top: 23" W x 19" D
Stand Weight	133 lbs
Base Unit Dimensions	Length: 21" Width: 20" Height: 19.5"
Cabinet Material	16 Ga. carbon steel
Cabinet Weight (approximately)	50 - 100 lbs
Arm Dimensions	4" diameter, 32" L fire-retardant flex arm, 15" L stainless steel ducting 7" diameter round hood
Air Volume (approximately)	High: up to 700 CFM Low: down to 50 CFM
Electrical	115/1/60, 2.5 amps 220/1/50, 1.5 amps 8' grounded power cord with NEMA 5-15P plug
Sound Level (at 3' from inlet)	Approx. 60 dba (High)
Main Filter Options	<i>Depending on the Application:</i> HEPA [up to 99.97% efficiency on particles 0.3 microns and larger] ASHRAE [up to 95% efficiency on particles 0.5 microns and larger] ULPA [up to 99.9995% efficiency on particles 0.12 microns and larger] Activated Carbon Specialty-Blended Filter Media [i.e. acid gas, mercury, aldehyde, and ammonia]
Limited Warranty	Limited two-year warranty from dates of shipment on defects due to materials or workmanship.
Patent #	5,843,197; 8,353,745