

Model 450 Portable Floor Sentry

Model # SS-450-PFS



The **Portable Floor Sentry Fume Extractor** is used as an engineering safety control for a variety of industrial applications that require the capture and filtration of airborne contaminants and chemical fumes. This source capture fume extractor features quiet operation, a powerful fan, a flame-retardant and self-supportive flex arm, and a variety of high-quality filtration media.

Typical applications for this unit include: *welding fume control, chemical fume extraction, solvent and epoxy fume control, particulate extraction, powder filling, soldering, light grinding, clean room applications, and a variety of applications involving chemical fumes and dust.*


Several filter media options are available for this unit and include: **HEPA filtration** (up to 99.97% efficiency on particles 0.3 microns and larger), **ASHRAE filtration** (up to 95% efficiency on particles 0.5 microns and larger), **ULPA filtration** (up to 99.9995% efficiency on particles 0.12 microns and larger), **Activated Carbon**, and **specialty-blended filter media** [i.e. acid gas, mercury, aldehyde, and ammonia]. The **Portable Floor Sentry** allows multiple filter media to be housed inside the filter chamber for applications that emit both particulates and fumes.

Other unit features include a variable speed controller, portability handle, 360-degree swivel arm, simple and quick “no-tool” filter change, and optional accessories including a Magnehelic Gauge, and quick change pre-filter.

Two smaller models [SS-300-PFS & SS-400-PFS] and a larger model [SS-500-WFE-MP1] are also available.



Model 450 Portable Floor Sentry

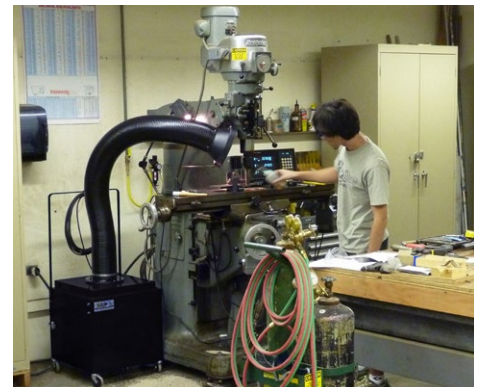

Product Features

- **Includes:** Variable speed controller (115V only), ON/OFF toggle switch (220V only), portability handle, and self-supportive flexible arm
- **Optional:** Magnehelic Gauge and hour counter
- 360-degree swivel arm
- Quiet, reliable, and low maintenance operation
- Low power consumption
- Long filter life
- Simple, quick “no tool” filter change



21221 FM 529 Rd, Cypress, TX 77433
1.800.799.4609 • sales@sentryair.com
www.sentryair.com

Fume & Particulate Removal

Product Specifications



Dimensions are approximate
Shown with optional accessories



21221 FM 529 Rd
Cypress, TX 77433
1.800.799.4609
sales@sentryair.com

www.sentryair.com

Base Unit Dimensions	Length: 22.5" (includes control box) Width: 20" Height: 19.5"
Arm Dimensions	6" Diameter, 72" L fire-retardant flex arm 10.5" diameter capture hood
Cabinet Material	16 Ga. carbon steel
Weight (approximately)	62 - 112 lbs.
Air Volume (approximately)	High: up to 950 CFM Low: down to 50 CFM
Electrical	115/1/60, 10.7 amps 220/1/50, 5.35 amps 8' grounded power cord with NEMA 5-15P plug
Sound Level (at 3' from inlet)	Approx. 72 dba (High)
Main Filter Options	<i>Depending on the Application:</i> HEPA [up to 99.97% efficiency on particles 0.3 microns and larger] ASHRAE [up to 95% efficiency on particles 0.5 microns and larger] ULPA [up to 99.9995% efficiency on particles 0.12 microns and larger] Activated Carbon Specialty-Blended Filter Media [i.e. acid gas, mercury, aldehyde, and ammonia]
Limited Warranty (From Date of Shipment)	Limited two year warranty on defects due to materials or workmanship. Limited six month warranty on fan/motor assembly.
Patent #	5,843,197