

Model 450 Portable Floor Sentry

Model # SS-450-PFS



The **Model 5450 Portable Floor Sentry Fume Extractor** is used as an engineering safety control for a variety of industrial applications that require the capture and filtration of airborne contaminants and chemical fumes. This source capture fume extractor features quiet operation, a powerful fan, a flame-retardant and self-supportive flex arm, and a variety of high quality filtration media.

Typical applications for this unit include: *welding fume control, chemical fume extraction, solvent and epoxy fume control, particulate extraction, powder filling, soldering, light grinding, clean room applications, and a variety of applications involving chemical fumes and dust.*

Several filter media options are available for this unit and include: **HEPA filtration** (up to 99.97% efficiency on particles 0.3 microns and larger), **ASHRAE filtration** (up to 95% efficiency on particles 0.5 microns and larger), **ULPA filtration** (up to 99.9995% efficiency on particles 0.12 microns and larger), **Activated Carbon**, and **specialty-blended filter media** [i.e. acid gas, mercury, aldehyde, and ammonia]. The **Portable Floor Sentry** allows multiple filter media to be housed inside the filter chamber for applications that emit both particulates and fumes.

Other unit features include a variable speed controller, portability handle, 360-degree swivel arm, simple and quick “no-tool” filter change, and optional accessories including a Magnehelic Gauge, digital hour counter, and quick change pre-filter.


A smaller model [SS-300-PFS] and a larger model [SS-500-WFE-MP1] are also available.



Model 450 Portable Floor Sentry



The Model 450 Portable Floor Sentry helps protect the operator from fumes by extracting at the source.

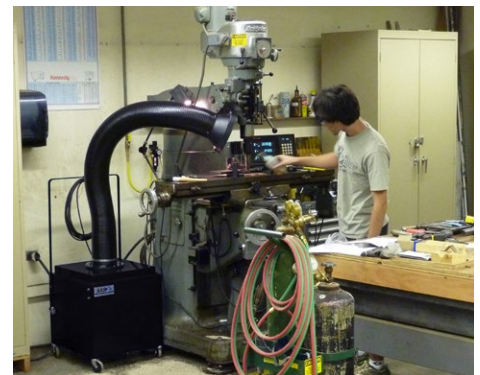

Product Features

- **Includes:** variable speed controller, portability handle, and (1) 72" L self-supportive flexible arm (360° swivel)
- **Optional:** Magnehelic Gauge, quick change pre-filter, and hour counter
- 360-degree swivel arm
- Quiet, reliable, and low maintenance operation
- Low power consumption
- Long filter life
- Simple, quick “no tool” filter change



21221 FM 529 Rd, Cypress, TX 77433
1.800.799.4609 • sales@sentryair.com
www.sentryair.com

Fume & Particulate Removal

Product Specifications



Dimensions are approximate.
Shown with optional accessories.



21221 FM 529 Rd
Cypress, TX 77433
1.800.799.4609
sales@sentryair.com

www.sentryair.com

Base Unit Dimensions (L x W x H)	22.5" x 20" x 21.75" <i>(includes control box in length)</i>
Arm Dimensions	6" diameter, 72" L fire-retardant flex arm 10.5" diameter capture hood
Cabinet Material	16 ga. carbon steel
Weight	Approx. 50 - 110 lbs.
Air Volume (approximately)	0 - 877 CFM <i>(from low to high)</i>
Electrical	115/1/60, 5.2 amps 8' grounded power cord with NEMA 5-15P plug
Sound Level (3' from inlet)	Approx. 71 dba <i>(high)</i>
Main Filter Options	<i>Depending on the Application:</i> HEPA [up to 99.97% efficiency on particles 0.3 microns and larger] ASHRAE [up to 95% efficiency on particles 0.5 microns and larger] ULPA [up to 99.9995% efficiency on particles 0.12 microns and larger]
Patent #	5,843,197