

## Model 100 Stainless Steel Winged Sentry with Lid



Model # SS-100-WSL-ST


**ESD SAFE**

The **Stainless Steel Winged Sentry with lid** offers an *ESD-Safe* solder fume extraction unit constructed to capture and filter of airborne contaminants at the work surface for stationary, benchtop applications. The adjustable “wing flaps” allow the operator to modify the workspace size to accommodate for the application. Also, the transparent hinged lid creates an enclosure, similar to a fume hood.



*Model 100 Stainless Steel Winged Sentry with lid*

This system’s energy-efficient fan draws in airborne fumes and particulate into the high-quality filtration media before releasing filtered air back into the surrounding room. Typical filtration media includes **HEPA filters**, which offers up to 99.97% efficiency on particles 0.3 microns and larger, and **ASHRAE filters** that provide up to 95% efficiency on particles 0.5 microns and larger. For fire reliant applications like soldering, this filtration media is constructed from fire-retardant materials.

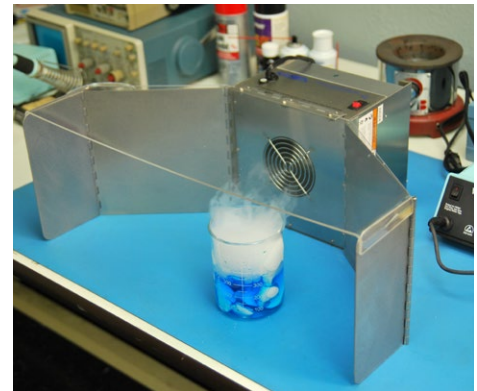


*The Model 100 Stainless Steel Winged Sentry with lid can be utilized for a variety of applications.*

The **Stainless Steel Winged Sentry** offers an effective, quiet, and economical *ESD-safe* fume extraction solution for many benchtop soldering operations. *ESD-safe* solutions help prevent electrostatic discharge while soldering to help protect expensive electronic media. All of Sentry Air’s products are proudly manufactured in the United States and are backed by our two-year limited warranty on parts and labor.

### Product Features

- **Includes:** Clear acrylic lid
- ESD-Safe (Electro-static discharge safe)
- Adjustable wing flaps
- Highly portable and lightweight
- Quiet, reliable, and low maintenance operation
- Sturdy construction
- Simple, quick “no tool” filter change
- Long filter life

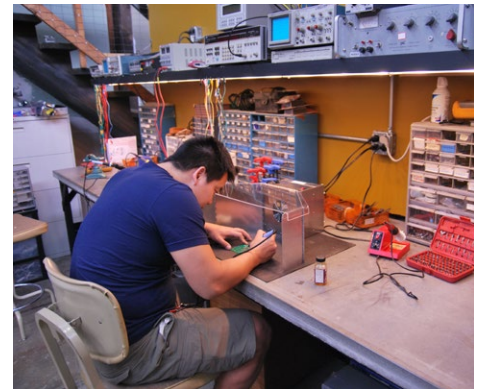


*Operator using the Model 100 Stainless Steel Winged Sentry with lid to help protect from inhaling harmful soldering fumes.*



21221 FM 529 Rd, Cypress, TX 77433  
1.800.799.4609 • sales@sentryair.com

[www.sentryair.com](http://www.sentryair.com)

## Product Specifications

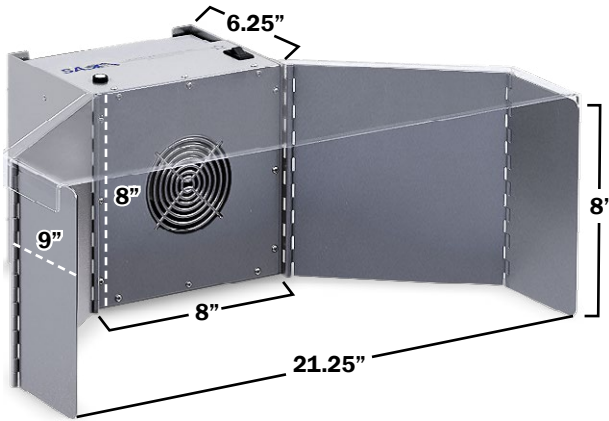

Shown with clear, acrylic lid  
Dimensions are approximate

<b>Base Unit Dimensions</b>	<b>Length:</b> 6.25" <b>Width:</b> 8" <b>Height:</b> 8"
<b>Cabinet Material</b>	18 Ga. stainless steel
<b>Weight (approximately)</b>	8 lbs
<b>Air Volume (approximately)</b>	up to 80 CFM <i>Varies with filter media</i>
<b>Electrical</b>	115/1/60, 0.3 amps 220/1/50, 0.2 amps 8' grounded power cord with NEMA 5-15P plug
<b>Sound Level (High at 3' from inlet)</b>	Approx. 62 dba
<b>Main Filter Options</b>	<i>Depending on the Application:</i> <b>HEPA</b> [up to 99.97% efficiency on particles 0.3 microns and larger] <b>ASHRAE</b> [up to 95% efficiency on particles 0.5 microns and larger]
<b>Warranty</b>	Limited two-year warranty from date of shipment on defects due to materials or workmanship.
<b>Patent #</b>	5,843,197



21221 FM 529 Rd  
Cypress, TX 77433  
1.800.799.4609  
sales@sentryair.com

[www.sentryair.com](http://www.sentryair.com)