

# Fume Extractor Arm

## Model 160 Fan-Powered Exhaust Arm

### Model # SS-160-PEA4

#### Product Specifications

##### ARM DIMENSIONS

4" Dia., 32" Long Fire-Retardant Flex Arm and 15" L Stainless Steel Ducting (7" Dia. Round Hood)

##### FAN DIMENSIONS

10" L x 9" W x 4" H

##### WEIGHT

Approx. 25 lbs.

##### AIR VOLUME

Variable Speed Control Standard on 115V  
160 CFM High, Down to 50 CFM Low

##### ELECTRICAL


115/1/60, 0.6 amps  
8' grounded power cord with NEMA 5-15P Plug

##### SOUND LEVEL


61 to 66 dba (Blower Speed: Low to High)

##### WARRANTY

Limited two-year warranty from date of shipment on defects due to materials or workmanship.  
PATENT #5,843,197

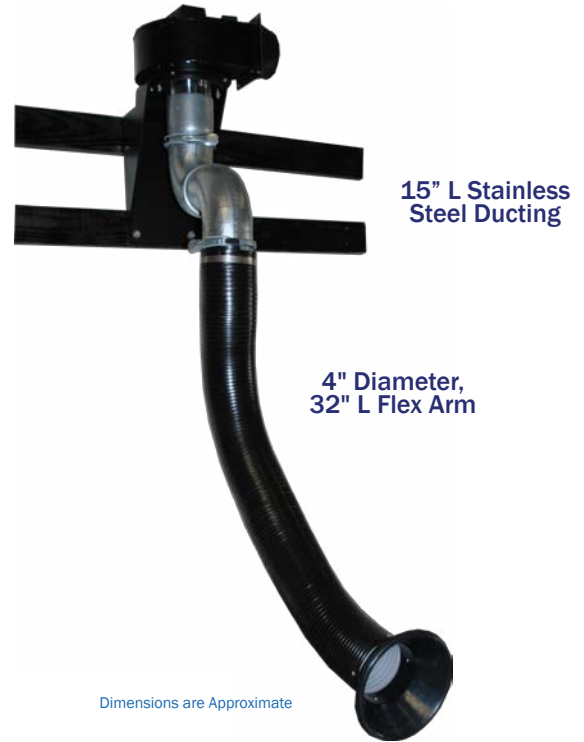

Dimensions are Approximate

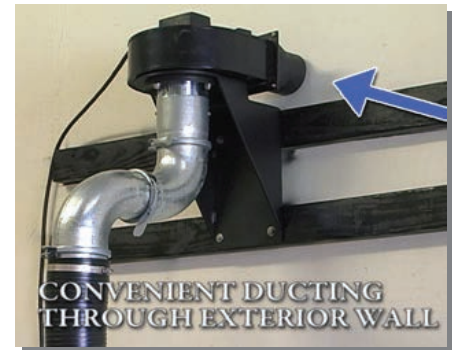

Capable of Four Exhaust Options

### Product Features

- Variable Speed Remote Controller *Included*
- Wall-Mounting Brackets *Included*
- Four Possible Exhaust Configurations
- Quiet Operation
- Reliable, Low Maintenance Operation
- Low Power Consumption
- Fire-Retardant Material
- Optional "Python-Style" Hose
- Optional Hour Counter

Sentry Air's **Model 160 Fan-Powered Extractor Arm** is a unique fume extraction option for applications that require exhaust without filtration. This flame-retardant, self-supportive exhaust arm is capable of up to 160 CFM of air volume and is equipped with a variable speed controller to fluctuate between low (down to 50 CFM) and high settings with ease. The Fan-Powered Extractor Arm is capable of 180° rotation and the modular design of this unit allows for four possible exhaust options.

This system comes equipped with all of the accessories needed for installation and use, including a wall-mounting kit. This unit plugs into a standard 115V outlet and requires no electrical assembly.

Typical uses for this extractor arm are welding fume control, solder fume removal, light grinding dust, and various other applications in manufacturing, medical, R&D, and pharmaceutical settings. This standalone extraction arm can be easily incorporated into your existing exhaust system.

This extractor arm is also available with filtration media [Model # SS-300-SKY] or as a standalone arm without a fan [Model # SS-000-EA4].



1.800.799.4609  
www.sentryair.com  
sales@sentryair.com

