

Model 200/225 Mounted Sentry Double

Model # SS-200/225-MSD



The **Mounted Sentry Double** fume extractor provides an excellent fume extraction choice for small or limited workspace environments for up to two operators. The unit features two self-supportive flex arms that provide source capture of airborne contaminants, while mounting options can free up much needed workspace. Mounting configurations include bench-mounting, under-the table mounting, and shelf or wall mounting.

Typical applications for this unit include *soldering, chemical fumes, solvent and epoxy fumes, laser fumes, light grinding, and many other procedures that involve the emission of particulate and fumes.*

The high-quality filter media for this unit used depends on the application being performed, but typically includes **HEPA filters** (up to 99.97% efficiency on particles 0.3 microns and larger), **ASHRAE filters** (up to 95% efficient on particles 0.5 microns and larger), **Activated Carbon**, and **specialty-blended filtration media** [i.e. acid gas, mercury, aldehyde, and ammonia].

The **Mounted Sentry Double** offers an effective, quiet and economical solution to many fume extraction needs with limited workspaces with multiple operators.

A single arm model [SS-200/225-MSS] and a larger unit [SS-300-MSD] are also available.



Model 200/225 Mounted Sentry Double



Model 200/225 Mounted Sentry Double allows fume extraction for two operators for a variety of applications.

Product Features


- **Included:** (2) self-supportive 48" L flex arms and mounting brackets
- **Optional:** variable speed controller (115V only) and hour counter
- Reliable, low maintenance operation
- Quiet operation
- Simple, quick "no tool" filter change
- Long filter life
- Small footprint



21221 FM 529 Rd, Cypress, TX 77433
1.800.799.4609 • sales@sentryair.com
www.sentryair.com

Fume & Particulate Removal

Product Specifications

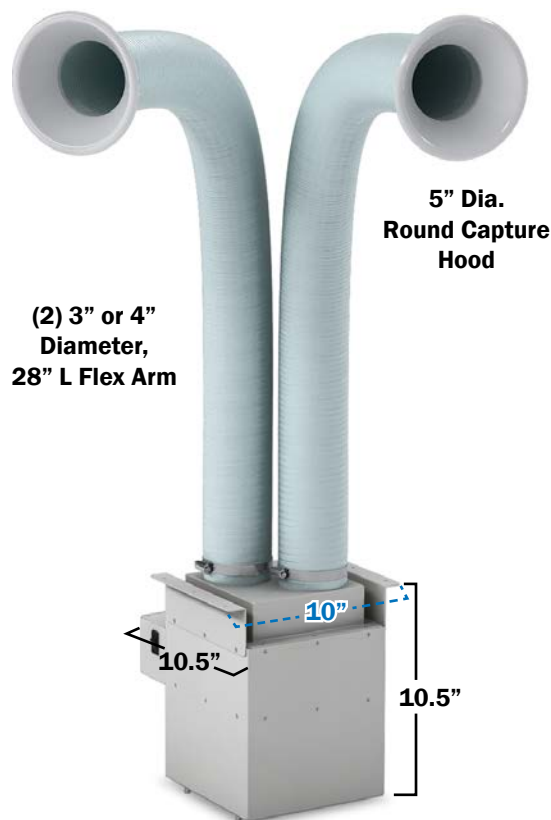

Dimensions are approximate.



21221 FM 529 Rd
Cypress, TX 77433
1.800.799.4609
sales@sentryair.com

www.sentryair.com

Base Unit Dimensions	Length: 10.5" (includes control box) Width: 10" (Includes Mounting Brackets) Height: 10.5"
Arm Dimensions	(2) 3" diameter, 48" long 5" capture hood
Cabinet Material	16 ga. carbon steel
Weight	Approx. 15 lbs
Air Volume (approximately)	Pre-Filter + HEPA: 200: up to 80 CFM (40 per) 225: up to 91 CFM (45 per)
Electrical	200: 115/1/60, 0.3 amps 220/1/50, 0.2 amps 225: 115/1/60, 0.46 amps 8' grounded power cord with NEMA 5-15P plug
Sound Level (High at 3' from inlet)	200: Approx. 56 dba 225: Approx. 64 dba
Main Filter Options	Depending on the Application: 200 - Chemical: Activated Carbon Specialty-Blended Filter Media [i.e. acid gas, mercury, aldehyde, and ammonia] 225 - Particulate: HEPA [up to 99.97% efficiency on particles 0.3 microns and larger] ASHRAE [up to 95% efficiency on particles 0.5 microns and larger] ULPA [up to 99.9995% efficiency on particles 0.12 microns and larger]
US Patent	#5,843,197