

Model 2000 Free-Hanging Air Cleaner

Model # SS-2000-FH



The **Model 2000 Free-Hanging Air Cleaner** provides high efficiency dual-stage industrial air filtration for ambient air cleaning and the removal of airborne pollutants without the assistance of external ducting. This system can be mounted a variety of ways: hang from the ceiling, fume extractor stand, or placed on a table. This self-contained unit can be conveniently mounted in the customer's desired ceiling location without taking up any floor space. This unit can also be mounted on a fume extractor stand [SS-091-FES] when ceiling mounting is not feasible. This system can also be placed on a table to be closer to the source of the fumes and particulate.

Typical applications include *light welding, sanding, buffing, automotive refinishing, grinding applications* and provides an optimal addition and safety solution for *welding workshops, automotive shops, manufacturing areas, wood shops, or any area that produces light amounts of dust, smoke, or certain fumes*. This system can also be used for *general air cleaning* in environments such as *community buildings, offices, cafeterias, sports facilities and other commercial arenas*.

This free-hanging unit features a four-way adjustable grill, a low-maintenance filtration system, and a design and color suitable for both industrial and commercial settings. The dual-stage filtration system consists of a **MERV 10 pre-filter** that offers up to 70% efficiency on particles down to 3 microns, and a **MERV 15 main bag filter** that provides up to 95% efficiency on particles down to 0.3 microns.

In-house factory testing in a 40,800 ft³ workshop in Houston, TX indicated an 87% reduction in airborne particulate after 50 minutes with two model **SS-2000-FH** units.



Model 2000 Free-Hanging Air Cleaner



Model 2000 Air Cleaner mounted on Fume Extractor Stand [SS-091-FES]

Product Features

- **Dual stage filtration:** MERV 10 pre-filter and MERV 15 main bag filter
- Long filter life
- Four-way adjustable grate
- Reliable, low maintenance operation
- Low power consumption
- Quiet operation
- Simple, quick "no tool" filter change




Model 2000 Air Cleaner can be mounted in several ways including hanging from the ceiling.



21221 FM 529 Rd, Cypress, TX 77433
1.800.799.4609 • sales@sentryair.com
www.sentryair.com

Ambient Air Cleaning

Product Specifications

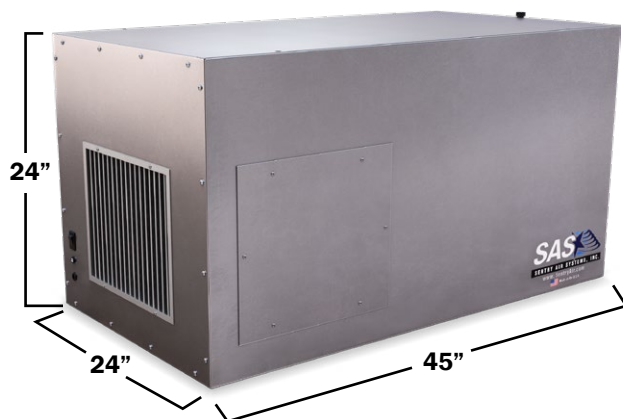

Dimensions are approximate.



21221 FM 529 Rd
Cypress, TX 77433
1.800.799.4609
sales@sentryair.com

www.sentryair.com

Base Unit Dimensions	Length: 45" Width: 24" Height: 24"
Outlet Configuration	Four-way adjustable grate
Cabinet Material	16 Ga. carbon steel with polyester powder coating
Weight (approximately)	117 lbs
Air Volume (approximately)	Up to 2,000 CFM (high)
Electrical	115/1/60, 8.7 amps 8' grounded power cord with NEMA 5-15P plug
Sound Level (High at 6' from inlet)	Approx. 70 dba
Filtration	Pre-Filter (MERV 10 - up to 70% efficiency on particles down to 3 microns) Main Filter ASHRAE Bag (MERV 15 - up to 95% efficiency on particles down to 0.5 microns)
Warranty	Limited two-year warranty from date of shipment on defects due to materials or workmanship.
US Patent	#5,843,197 Pending