

## Model 440 Industrial Downdraft Bench

### Model # SS-440-DDB

#### Product Specifications

##### TABLE DIMENSIONS

48" W x 30" D x 35" H

*Request specifications for additional size*

##### PERFORATED WORK AREA

Stainless Steel 1/4" Perforated Work Area

40" W x 22" D x 16g, 51% open space

##### TABLE MATERIAL

304 Stainless Steel Surface, Chrome-plat

##### PLENUM BOX OUTLET OPTIONS

10" Diameter Round Outlet

##### BLOWER CABINET DIMENSIONS

20" W x 22.5" D x 19.5" H, *Including Con*

##### BLOWER CABINET MATERIAL

16 ga. Carbon Steel

##### WEIGHT

Approx. 150 lbs.

*Varies Depending on Filter Media Install*

##### AIR VOLUME

Variable Speed Control Standard on 115V

700 CFM High, Down to 50 CFM Low

On/Off Toggle Switch Standard on 220V

##### ELECTRICAL

115/1/60, 2.5 amps

220/1/50, 1.5 amps

8' grounded power cord with NEMA 5-15P Plug

##### SOUND LEVEL

Approx. 60 dba @ 3'

##### FILTRATION

Depending on the Application:

- HEPA [up to 99.97% efficient on particles 0.3 microns and larger]
- ASHRAE [up to 95% efficient on particles 0.5 microns and larger]
- ACTIVATED CARBON
- SPECIALTY-BLENDED FILTER MEDIA [i.e. Acid Gas, Mercury, Aldehyde, Ammonia]


##### WARRANTY

Limited two-year warranty from date of shipment on defects due to materials or workmanship.

PATENT #5,843,197



Dimensions are Approximate

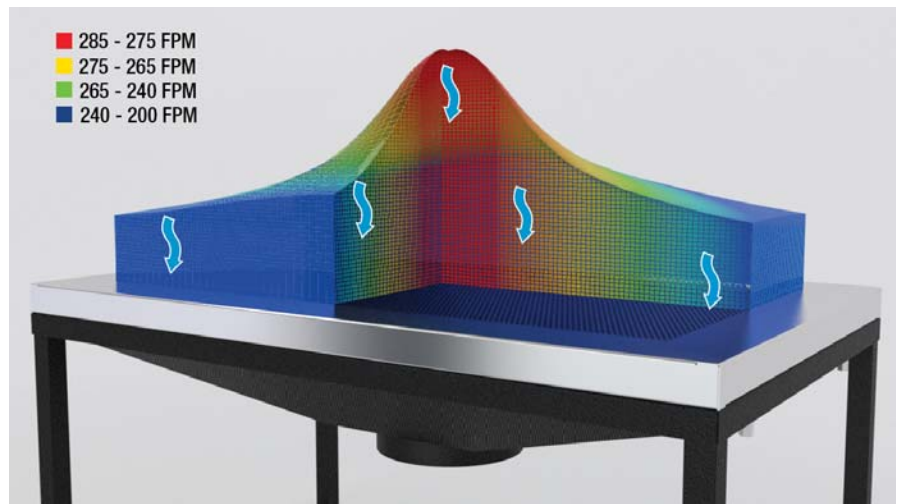

### Product Features

- Variable Speed Controller Included (115V only)
- Low Power Consumption
- Optional Hour Counter
- Sturdy Construction
- Simple, Quick "No Tool" Filter Change
- Reliable, Low Maintenance Operation
- Optional Magnehelic Gage

The **Model 440 Industrial Downdraft Bench** is an effective source-capture solution for the extraction of fume, dust, and smoke at the work surface level. This safety engineering control helps to protect the operator's breathing zone and surrounding environment from hazardous airborne contaminants. Sentry Air Systems offers both standard and custom stainless steel downdraft benches that are equipped with a powerful industrial air cleaner and high-quality HEPA filtration media. This filter media is up to 99.97% efficient on particles 0.3 microns and larger and the air cleaner provides up to 700 CFM of air volume [950 CFM is available as an upgrade]. ASHRAE filtration, heavy-duty activated carbon, and specialty-blended filter media are also utilized in certain applications. These negative-pressure systems are designed to eliminate costly exhaust systems, reduce energy losses, and aid in employee protection by capturing pollutants at the source of emission. Typical applications include: solvent vapor control, solder fumes, light grinding, epoxy fume control, sanding, buffing, brazing, powder control, and a variety of other industrial applications. Custom design options and modifications can be discussed with a Sentry Air Applications Specialist.

*Disclaimer: NOT for combustibles (aerosols; paints) and be cautious of chemical applications.*



1.800.799.4609  
[www.sentryair.com](http://www.sentryair.com)  
[sales@sentryair.com](mailto:sales@sentryair.com)

